

ROLODEX®

BRAND

The Original Just Got Better.

Instruction Booklet for

THE ELECTRODEX PLUS™
AND
THE POCKET ELECTRODEX™



64K
MEMORY
929292

ROLODEX®, the company known for its classic filing systems, introduces the 64K ElectroDEX™ Plus and Pocket ElectroDEX™, designed by leading American executives for the American way of doing business. For over 50 years Rolodex has been one of the most respected names in business and now continues that tradition with state of the art personal and business electronic organizers.

The 64K ElectroDEX™ Plus and Pocket ElectroDEX™ are separate products that represent a true combination of sophistication and simplicity. They feature a Business Card File to replace your paper Rolodex® card file, a Call List and Letters to Write List, a Reminder Note Pad, Monthly Calendar and Paper-free Calculator. They also have 2 bonus features: an Infrared Transfer System to transfer files from one unit to another through a beam of light; and, an automatic internal memory transfer, which transfers information from your Business Card File to your Call Sheet or Letters to Write list so you don't have to enter names and phone numbers twice.

Congratulations.

by **ROLODEX**

The Original.

TABLE OF CONTENTS

INTRODUCTION	3
DISPLAY SCREEN	4
KEYPAD LAYOUT AND FEATURES	25-26
THE BUSINESS CARD FILE	5
How to Enter and Recall	5-11
How to Change and Erase (Erase and Replace)	12-14
How to Delete	14
How to Transfer a person's Name and Phone Number to the Call Sheet	16
How to Transfer a person's Name and Company Name to the Letters to Write list	15
THE LETTERS TO WRITE LIST	17
How to Enter and Recall	17-18
How to Delete	19
THE CALL SHEET	20
How to Enter and Recall	20-21
How to Delete	22
THE REMINDER NOTE PAD	23
How to Enter and Recall	23-24
How to Delete	27
How to Change	28-29
THE MONTHLY CALENDAR	30
THE PAPER-FREE CALCULATOR	32
CURRENCY CONVERTER	33
Programming Currency Exchange Rates	33-34
Converting Currencies	34-36
KEYTONE ON/OFF	36
PERSONAL SECURITY CODE	37-38
INFRARED TRANSFER OF FILES BETWEEN UNITS	39-44
BATTERY REPLACEMENT	45-46
MISCELLANEOUS	47-49
WARRANTY	50

INTRODUCTION

 
Both The Electrodex™ Plus and Pocket Electrodex™ were produced with a specific purpose in mind: to replace your old index card file. In order to gain the most efficient and maximum use out of your units, follow these suggestions:

1. Enter ALL names, phone numbers, addresses and any additional reference information into the Business Card File; this is your main database.
2. From the Business Card File use the internal transfer to send names and phone numbers to the Call Sheet, and to send names and company names to the Letters To Write list. (You should never have to enter the same name or phone number twice.)
3. Use the Call Sheet for calls to make a particular day or week, and update the list routinely (i.e., after you've made a call on the list, delete that name and number). Use the Letters To Write List the same way as the Call Sheet.
4. Use the Reminder Note Pad for all your miscellaneous notes and things-to-do.

NOTE: Both units have a complete built in "On-Screen" instruction manual. Just press  and then  to view.


DISPLAY SCREEN

SUPER TWIST LCD:

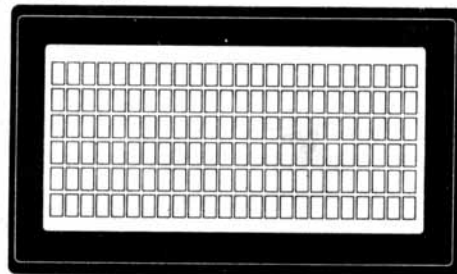

The Electrodex Plus & Pocket Electrodex both feature a 24 character across by 6 line Super-Twist display screen for your ease of viewing. This type of Super-Twist Display screen is today's state of the art. Its advantages over normal LCD displays are more clearly defined characters and viewing from multiple angles.

 
ON-SCREEN INDICATORS:

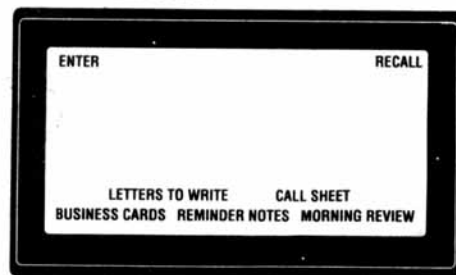

The Electrodex™ Plus & Pocket Electrodex™ both feature Indicators that appear on-screen at all times to signal which feature you are in.

THE BUSINESS CARD FILE

 HOW TO ENTER A BUSINESS CARD FILE:

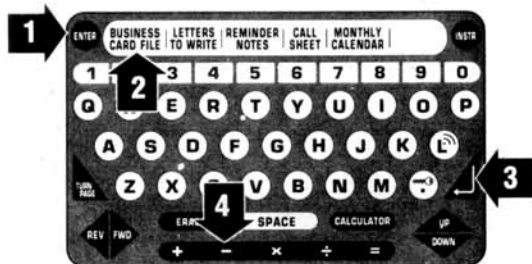

Display Reads

TO ENTER INFORMATION FOR
 *BUSINESS CARD FILE
 *LETTER TO WRITE
 *REMINDER NOTES
 *THE CALL SHEET
 PRESS THE ABOVE CHOICE

Display Reads

TYPE LAST-FIRST NAME
 COMPANY NAME
 TEL NO FAX NO.
 ADDRESS
 CITY STATE ZIP
 ADDITIONAL BUSINESS INFO

1 Press **ENTER**

2 Press **BUSINESS CARD FILE**


Type in your file following the format that appears on the display.

Example

ENTER

ALLEN MARKS-ACCOUNT EXEC
 DUMONT CORPORATION
 232-746-5609 FAX 555-5138
 888 PARK AVENUE SUITE 7
 NEW YORK NEW YORK 10023
 1990 SALES VOLUME 745000

BUSINESS CARDS

3 To go to the beginning of the next line press  (To skip the company name press the return key, leaving the second line blank.) If you make an error press

Display Reads
 ALLEN MARKS-ACCOUNT EXEC
 DUMONT CORPORATION
 TEL NO FAX
 ADDRESS
 CITY STATE ZIP
 ADDITIONAL BUSINESS INFO

ERASE

4 Type in the telephone number. Use the **minus (-)** or **SPACE** key to place dashes or spaces between telephone numbers.

NOTE: The first 12 characters on the third line must be numbers. After completing the phone number simply begin the next number (fax number, home phone, extension, etc.), the unit will skip a space for you.

NOTE: If the address exceeds 24 characters the cursor will return to the next line. The rest of the file can be used for business notes, and can be as long as you like.

5. Press **BUSINESS CARD FILE** again to store the file.

Display Reads
 ALLEN MARKS-ACCOUNT EXEC
 DUMONT CORPORATION
 232-746-5609 FAX
 ADDRESS
 CITY STATE ZIP
 ADDITIONAL BUSINESS INFO

Display Reads
 TYPE LAST-FIRST NAME
 COMPANY NAME
 TEL NO FAX NO.
 ADDRESS
 CITY STATE ZIP
 ADDITIONAL BUSINESS INFO

NOTE: Also, if you press Enter, Letters to Write, Reminder Notes, Call Sheet, Monthly Calendar, or Calculator, your file will be stored.

HOW TO RECALL A BUSINESS CARD FILE (3 METHODS):

 
A. RECALL BY SPECIFIC FILE NAME (PERSON'S NAME OR COMPANY NAME)

B. RECALL IN ALPHABETICAL ORDER

C. RECALL BY FAST FORWARDING THROUGH ALL FILES, A THRU Z AND 0 THRU 9

A) HOW TO RECALL A SPECIFIC FILE NAME:

The Electrodex™ Plus and Pocket Electrodex™ have a "Cross Referencing" feature that allows you to recall the same file by the person's name OR the company name.

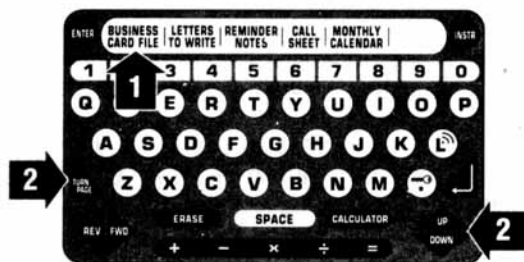

1 Press **BUSINESS CARD FILE**

Display Reads

TYPE IN NAME OF PERSON
OR COMPANY NAME

BCF MEMORY USED:
BCF MEMORY LEFT:

 
Type in the first letter of the person's name or company name, then type in the second letter, etc. until the file appears on the display screen.

Display Reads

A

PLEASE TYPE NEXT LETTER

Example

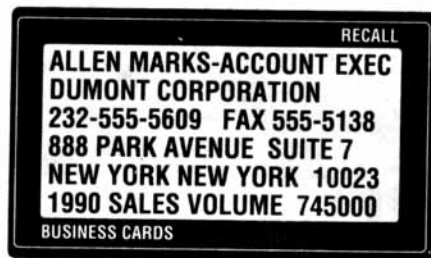

2 Press **TURN PAGE** if the file is more

than 6 lines long. The name of the file will remain on the first line while the next 5 lines will appear from the next page.

Press **DOWN** to view the contents of the next page one line at a time.

Display Reads

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

IMPORTANT: If a file's contents do not appear on the screen after all the letters of the name have been entered, then there is more than one file with that name. In this case, after the full

name has been typed in, press **FWD** and all the files with that name will appear in alphabetical order.

B) HOW TO RECALL A FILE IN ALPHABETICAL ORDER:



Display Reads

TYPE IN NAME OF PERSON
OR COMPANY

Example

A
PLEASE TYPE NEXT LETTER

Example

ALLEN MARKS ACCOUNT EXEC
ALLEN MARKS ACCOUNT EXEC
ALLEN MARKS ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

1 Press

BUSINESS
CARD FILE

2 Type in the first initial only of
the person's name or company
name.

3 Press **FWD** repeatedly to
view all files with that initial.

Press **REV** to review all files
before that initial.

C) HOW TO FAST FORWARD THROUGH ALL FILES "A" THRU "Z" AND 0 THRU 9:



Display Reads

TYPE IN NAME OF PERSON
OR COMPANY

Example

3D PRINTING
MAILERS INC.
DUMONT CORPORATION
COMPUTECH
BURN ASSOCIATES
ACA COMPANY
STEVE JOHNSON
232-555-6094 FAX 555-6097
249 WASHINGTON AVE
CHICAGO IL 60601
DISCOUNT TERMS-7 PCNT.

1 Press

BUSINESS
CARD FILE

2 Press and HOLD DOWN **FWD**
to fast forward through all files
in alphabetical and then
numerical order.

Press **FWD** repeatedly
to view files one at a
time. Press **REV**
to review files in reverse order.

ROTARY "SPIN THE DIAL" FEATURE

HOW TO USE THE ROTARY DIAL FEATURE TO VIEW BUSINESS CARD FILES (The Electrode Plus only):

Rolodex® makes it easy. Rolodex®, the company known for its filing systems, has incorporated its classic Rotary Dial into the Electrode Plus. This unique "electronic" rotary dial allows you to spin through your Business Card Files for easy access and viewing.


1. Press **BUSINESS CARD FILE**
2. Spin the dial to view all Business Card Files.



OR 1. Anytime **after** you have recalled a Business Card File to the display screen you may,

2. Spin the dials located on the right or left sides of The Electrode Plus to view additional files in forward or reverse order.

 NOTE: Turning the dial one click at a time will advance (or reverse) one file at a time.

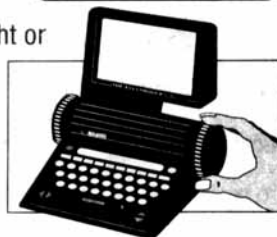

Display Reads

TYPE IN NAME OF PERSON
OR COMPANY

BCF MEMORY USED:
BCF MEMORY LEFT:

 
Example

ALLEN MARKS
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

HOW TO CHANGE A BUSINESS CARD FILE


(Erase and Replace):

REMEMBER: When changing files, you must erase the old information **before** you type in the new information.

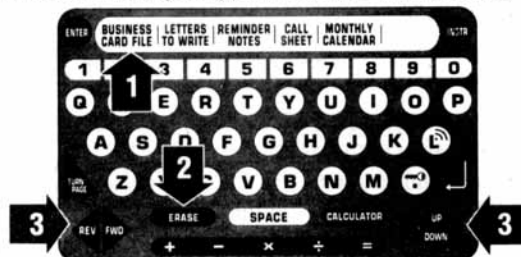

- 1 Recall the file you want to change.
- 2 Press **ERASE** once. A flashing cursor appears after the last character on the first line.

 Example

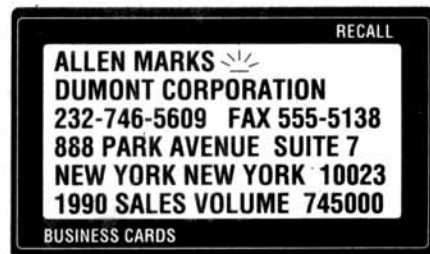

- 3 Use the **REV FWD** & **UP DOWN** keys to move the cursor around the display screen. Holding down these keys will allow continuous movement of the cursor. Move the flashing cursor to the **END** of the word you want to delete and/or change.

4. When the character to be erased is flashing press **ERASE** until that character disappears. Now continue pressing this key to erase the complete word.

Example

ALLEN MARKS
ALLEN MARK
ALLEN MAR
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

5. Once you have erased, you are ready to insert new information. When changing and adding information on lines 1 and 2, fit the new information within the existing 24 characters per line.

Example

ALLEN MARKS
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

6. To update a phone number (first 12 characters) which appears on line 3, place the cursor at the beginning of the line and type in the new number. (The old number will disappear.) To update a fax number (last 11 characters), which appears on line 3, move the flashing cursor to the end of the number then erase and replace characters as described in the above points 4 and 5.

Example

ALLEN MARKS
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000


7. When changing and adding information on lines 4,5,6 and following pages, if the new information has more characters than you erased, then the existing information will automatically move to the right. If this new information exceeds the original file format of 24 characters per line, words may split and move on to the next line below.

Example

ALLEN MARKS
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

NOTE: You can add to any line by moving the cursor to the right of the last existing character on that line and typing in the new information.

NOTE: To create and insert a new line into the middle of a file (lines 4,5,6 and following pages), move the cursor to the first character of the line you want to create and

press the  key, then move the cursor up to the blank line to enter new information.

NOTE: Empty lines cannot be deleted and once a file has been changed, you cannot revert back to the original file.

HOW TO DELETE A BUSINESS CARD FILE:

1. Recall the file to be deleted.

2. Press and HOLD DOWN the

ERASE key until the file disappears from the screen.

That particular file is now permanently erased from the unit's memory.

Example

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

Example-Before

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

Example-After

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023

Example

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

Display Reads

TYPE IN NAME OF PERSON OR COMPANY

HOW TO TRANSFER A PERSON'S NAME AND COMPANY NAME FROM THE BUSINESS CARD FILE TO THE LETTERS TO WRITE LIST:



- 1 Recall the Business Card File you want to transfer.

Example

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

- 2 Press and HOLD DOWN **SPACE** then **LETTERS TO WRITE** once, while the space key is still down.

Display Reads

INFORMATION IS BEING PUT
INTO LETTERS TO WRITE NOW

PLEASE WAIT A MOMENT

3. The person's name and company name will be transferred instantly to the Letters To Write list in alphabetical order.

Example

ALLEN MARKS DUMONT CORP
BILL CONNER COMPUTECH
DAN HIGGINS MAILERS INC.

NOTE: In order for both the person's name and company name to appear on the same line when recalled, both names will automatically be abbreviated if necessary.

HOW TO TRANSFER A NAME AND PHONE NUMBER FROM THE BUSINESS CARD FILE TO THE CALL SHEET:



- 1 Recall the Business Card File you want to transfer.

Example

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

- 2 Press and HOLD DOWN **SPACE** then **CALL SHEET** once, while the space key is still down.

Display Reads

INFORMATION IS BEING PUT
INTO THE CALL SHEET NOW

PLEASE WAIT A MOMENT

3. The person's name (or company name depending on which name was on line 1 of the display when you recalled the Business Card File) and phone number will be transferred instantly to the Call Sheet list in alphabetical order.

Example

ALLEN MARKS 232-555-5609
BOB WEATON 232-555-7608
DON JOHNSTON 232-555-5988

NOTE: In order for the 12-digit phone number and name to appear on the same line when recalled, the person's name or company name will be abbreviated to the first 11 characters.

THE LETTERS TO WRITE LIST

HOW TO ENTER INFORMATION (MANUALLY) INTO THE LETTERS TO WRITE LIST:



1 Press **ENTER**

2 Press **LETTERS TO WRITE**

Following the format that appears on the display, type in the name of the person you want to write.

NOTE: The cursor will return to the next line automatically after 11 characters. If the name is shorter

press  then type in

the company name on the second line (12 character limit). If you make an error press **ERASE**

3. Press **LETTERS TO WRITE** to enter the file.

Display Reads

TO ENTER INFORMATION FOR
*BUSINESS CARD FILE
*LETTERS TO WRITE
*REMINDER NOTES
*THE CALL SHEET
PRESS ABOVE CHOICE

Display Reads

 
TYPE IN THE PERSONS LAST
NAME-FIRST NAME AND
COMPANY NAME

THEN PRESS LETTERS TO
WRITE

Example


ALLAN MARKS
DUMONT CORP

HOW TO RECALL THE LETTERS TO WRITE LIST:

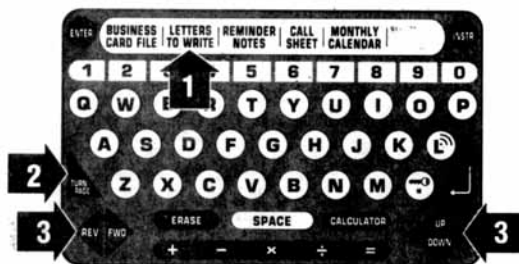

1 Press **LETTERS TO WRITE** The first 6 lines of the list will appear on the display screen.

 Example

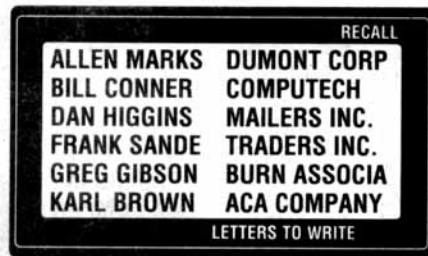

2 Press  to view 6 lines at a time.

EXAMPLE

MARK JONES JOHNSON INC.
SANDRA PAGE CARLTON CO.
SCOTT COHEN ADVANCED TE
STEVEN GIPPS EAST WEST IM
TIM DRAKE SMYTH LOANS
WARREN BUR COUNTY PRIN

 
3 Press  or  repeatedly to view line by line through the list.

HOW TO DELETE A FILE FROM THE LETTERS TO WRITE LIST:



1 Press **LETTERS TO WRITE**

Example

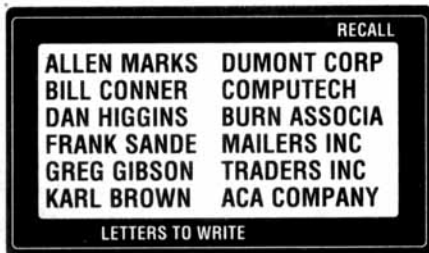

2 Press **DOWN** until the line you want to delete is on the TOP LINE of the display.

3 Press and HOLD **DOWN** **ERASE** until the file (top line only) disappears. Remaining files will move up automatically.

THE CALL SHEET

HOW TO ENTER INFORMATION (MANUALLY) INTO THE CALL SHEET:



1 Press **ENTER**

Display Reads

TO ENTER INFORMATION FOR
*BUSINESS CARD FILE
*LETTERS TO WRITE
*REMINDER NOTES
*THE CALL SHEET
PRESS THE ABOVE CHOICE

Display Reads

TYPE IN THE PERSONS LAST
NAME AND
TEL. NO

THEN PRESS CALL SHEET

Example

ALAN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5609 FAX-555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10002
1990 SALES VOLUME 745000

2 Press **CALL SHEET**

Type in the first 11 characters of the person's last name only.

 
NOTE: The cursor will return to the next line automatically after 11 characters. If the name is shorter

press **ENTER** then type in

the telephone number on the second line (12 character limit, numerals only). If you make an error press **ERASE**

3. Press **CALL SHEET** to enter the file.

HOW TO RECALL THE CALL SHEET:

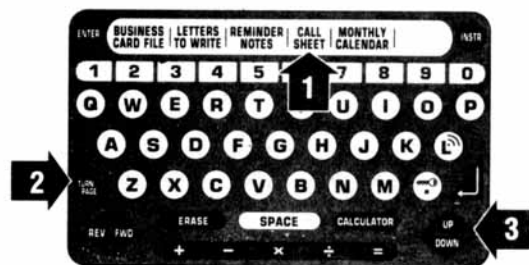

- 1 Press **CALL SHEET**. The first 6 lines of the list will appear on the display screen.

 
Example



- 2 Press **TURN PAGE** to view 6 lines at a time.

- 3 Press **UP** or **DOWN** repeatedly to view line by line through the list.

HOW TO DELETE A FILE FROM THE CALL SHEET:

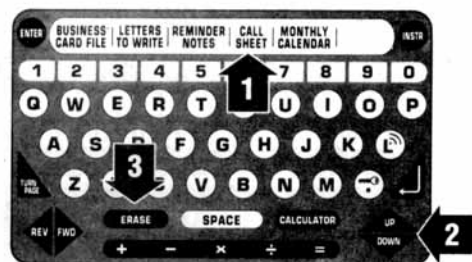

- 1 Press **CALL SHEET**.

Example



- 2 Press **DOWN** until the line you want to delete is on the TOP LINE of the display.
- 3 Press and HOLD **DOWN** **ERASE** until the file (top line only) disappears. Remaining files will move up automatically.

THE REMINDER NOTE PAD

HOW TO ENTER A REMINDER NOTE FILE:



1 Press **ENTER**

2 Press **REMINDER NOTES**

3. Type in your Reminder Note information. If you make an error press **ERASE**

NOTE: Each Reminder Note file will automatically indent after the first line when recalled for easy viewing (see "Example-After"). While entering information leave the last character of each line blank. Press the return key before reaching the end of the line to allow for an indentation and avoid breaking up words upon recall.

Display Reads
TO ENTER INFORMATION FOR
*BUSINESS CARD FILE
*LETTERS TO WRITE
*REMINDER NOTES
*THE CALL SHEET
PRESS ABOVE CHOICE

Display Reads
TYPE IN ANOTHER REMINDER
NOTE IF YOU WANT AND A
DATE IF IT APPLIES

THEN PRESS REMINDER NOTE

Example-Before
File 1 12-7-90 C.D. MATURES
File 2 ROLL OVER FOR 60 DAYS
File 3 FAX ACCOUNT LIST TO TED
BEFORE SALES MEETING
SET UP MEETING WITH JOHN
REGARDING ADVERTISING

Example-After
File 1 12-7-90 C.D. MATURES
File 2 ROLL OVER FOR 60 DAYS
File 3 FAX ACCOUNT LIST TO TED
BEFORE SALES MEETING
SET UP MEETING WITH JOHN
REGARDING ADVERTISING

NOTE: If you enter a date at the beginning of a file, place a zero (0) before all single digit months and days. This way they will appear in chronological order when recalled.

Example

02-07-90 C.D. MATURES
ROLL OVER FOR 60 DAYS
05-02-90 DAVID WEATON
DINNER AT 6PM
11-09-90 DUMONT CORP
PRODUCTION DATES DUE

HOW TO RECALL THE REMINDER NOTE PAD:



1 Press **REMINDER NOTES** The first 6 lines of the list will appear on the display screen.

Example

RECALL
12-7-90 C.D. MATURES
ROLL OVER FOR 60 DAYS
FAX ACCOUNT LIST TO TED
BEFORE SALES MEETING
SET UP MEETING WITH JOHN
REGARDING ADVERTISING
REMINDER NOTES

2 Press **TURN PAGE** to view 6 lines at a time. Press **UP** or **DOWN** repeatedly to view line by line through the list.

KEYPAD LAYOUT AND FEATURES

• Recalls your Business Card Files

• Each feature key allows direct "One-Touch" recall for instant viewing of your feature lists

• Viewing of built-in month-at-a-glance calendar

• Allows entry into: The Business Card File, Letters to Write, Reminder Notes and Call Sheet

• Displays the built-in on screen instruction manual

Allows unit to receive files through the Infrared Transfer System

Sends files through the Infrared Transfer System

Turns the page on the display screen to view entire contents of a file

Moves the cursor to the next line down while entering information

 
Displays currency conversion feature

Personal Security Code lock/unlock system

Lets you forward or reverse through your Business Card Files. Also forward and reverses through the months on The Monthly Calendar

Moves lines up and down on the display screen to view entire contents of your files. Also advances and reverses through the years on the Monthly Calendar

• Denotes keys that turn the unit ON

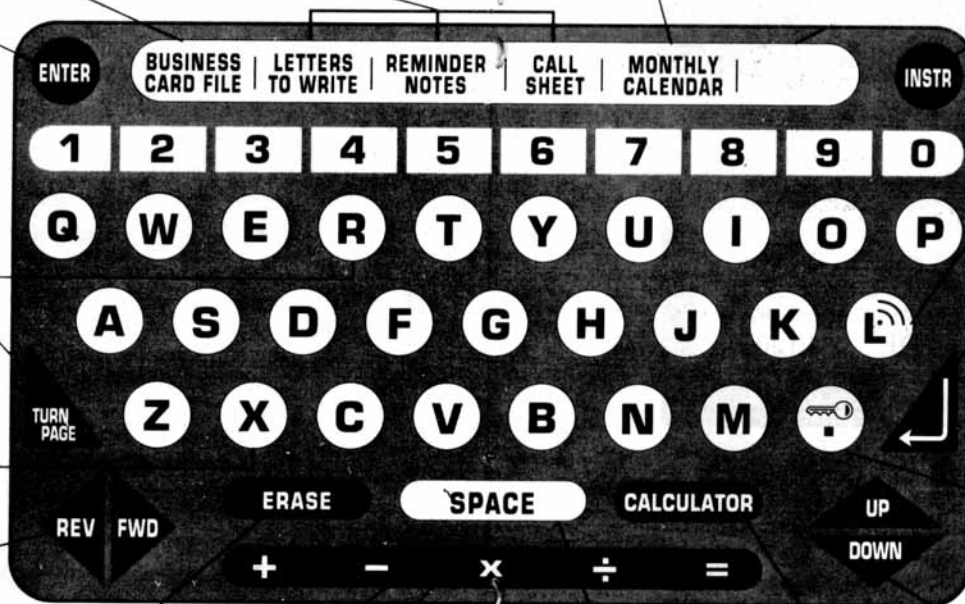

Erases, edits, and backspaces

 
Full-function calculator symbols

• Calculator and clear entry

Use minus key to enter dashes in phone numbers


Adds spaces between characters during entry

HOW TO DELETE A FILE FROM THE REMINDER NOTE PAD:

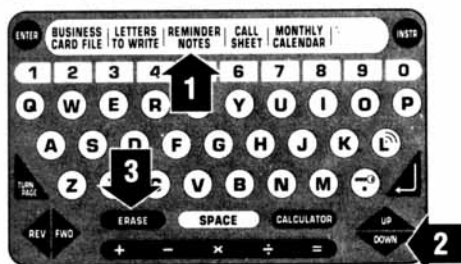

- 1** Press **REMINDER NOTES**

 Example

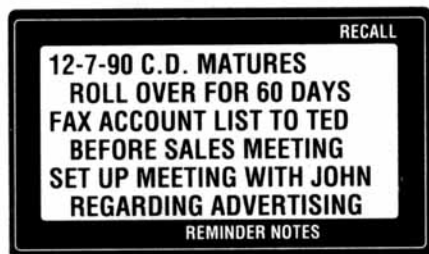

- 2** Press **DOWN** until the file you want to delete is on the TOP LINE of the display.

- 3** Press and HOLD **DOWN** **ERASE** until the file (top line and indented lines which follow) disappears. Remaining files will move up automatically.

 
NOTE: Do not erase character by character to delete a Reminder Note File. This will leave a blank file that will show blank display lines when you recall your Reminder Notes.

HOW TO CHANGE A FILE IN THE REMINDER NOTE PAD:



- 1** Press **REMINDER NOTES**

Example

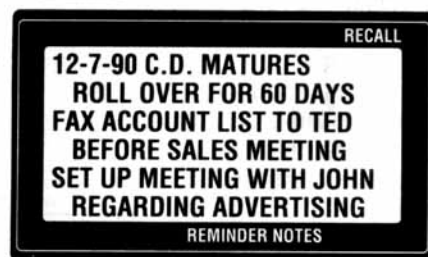

- 2** Press **UP** **DOWN** until the file you want to change is on the TOP LINE of the display.

- 3** Press **ERASE** and the cursor will appear to the right of the last character on that line (all other entries will disappear from the screen but will not have been erased).

Example-Before

FAX ACCOUNT LIST TO TED
BEFORE SALES MEETING
SET UP MEETING WITH JOHN
REGARDING ADVERTISING

Example-After

FAX ACCOUNT LIST TO TED
BEFORE SALES MEETING

4. When the character to be erased is flashing press **ERASE** until that character disappears. Now continue pressing this key to erase the complete word.

5. Once you have finished erasing, you are ready to insert new information. If the new information has more characters than you erased, then the existing information will automatically move to the right. If this new information exceeds the original file format of 24 characters per line, words may split and move on to the next line below.

Example

FAX ACCOUNT LIST TO TED
FAX ACCOUNT LIST TO TE
FAX ACCOUNT LIST TO T
FAX ACCOUNT LIST TO
BEFORE SALES MEETING
FAX ACCOUNT LIST LISA
BEFORE SALES MEETING

Example-Before

FAX ACCOUNT LIST LISA
BEFORE SALES MEETING


Example-Before

FAX ACCOUNT LIST LISA
BEFORE SALES MEETING

Example

FAX ACCOUNT LIST LISA
JONES ON APRIL 20
BEFORE SALES MEETING

NOTE: To create and insert a new line into the middle of a file, move the cursor to the first character of the line you want to create and

press the  key, then move the cursor up to the blank line to enter new information.

NOTE: You can add to any line by moving the cursor to the right of the last existing character on that line and typing in the new information.

NOTE: Empty lines cannot be deleted and once a file has been changed, you cannot revert back to the original file.

THE MONTHLY CALENDAR



HOW TO USE THE MONTHLY CALENDAR:



1 Press **MONTHLY CALENDAR**

Example

SUN	MON	TUE	WED	THU	FRI	SAT
1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30					
SEP 1991						

2 Press  or  to reverse or advance through the months. Hold down these keys to fast forward or fast reverse.

3 Press  or  to reverse or advance through the years. Hold down these keys to fast forward, or fast reverse.

THE PAPER-FREE CALCULATOR

HOW TO USE THE PAPER-FREE CALCULATOR:



Display Reads

0

1 Press **CALCULATOR**

2. Enter your calculation.

NOTE: To clear last entry press **CALCULATOR**. To clear all calculations press **CALCULATOR** twice.

NOTE: The calculator will automatically subtotal your calculations as your entry exceeds the 6 lines on the display screen. Line 1 of the second page will show the previous page's subtotal.

Example

	12573.95
X	5
-	6329.00
+	56.00
+	167.00
÷	7

Example

= 8109.1071

 
CURRENCY CONVERTER

HOW TO PROGRAM CURRENCY EXCHANGE RATES:



1 Press **CALCULATOR**

2 Press the letter "X". Display Reads

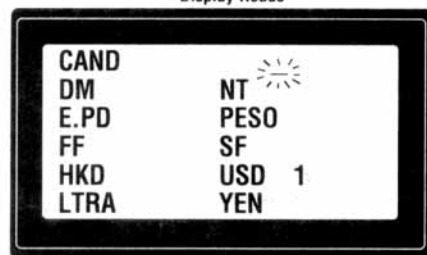

3 Using **REV FWD** & **UP DOWN** move the flashing cursor next to the country currency abbreviation.

4. Type in the exchange rate which equals one U.S. Dollar.

NOTE: The U.S. Dollar is preset to 1.

Example

CAND	1.2	NT
DM	0.73	PESO
E.PD		SF
FF		USD 1
HKD		YEN
LTRA		

 
5. You can enter 9 more country exchange rates by moving the cursor.

6. Press the letter "X" again to confirm entries.

NOTE: For currencies with an exchange rate less than 1 you must type in a zero before the decimal point (e.g. 0.53)

HOW TO CONVERT CURRENCIES:

Example #1: Let's say that \$1 U.S. Dollar is worth £.53 English Pounds. How many U.S. Dollars could you buy with £200 English Pounds?

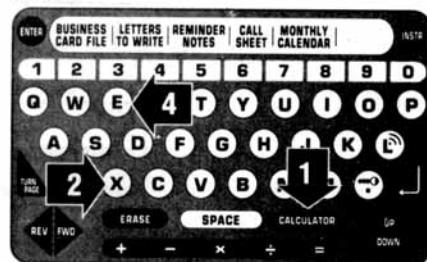

1 Press **CALCULATOR**

2 Press the letter "X".

3. Without moving the cursor, type in "200".

4 Press the alphabet key which is the first initial of the foreign currency you've entered. (C,D,E,F, H,L,N,P,S,U,Y). In this example press "E" for E.PD (English Pound)

5. Then "\$377.35" will appear next to USD.

Example

CAND		200
DM	NT	
E.PD	200.00	PESO
FF		SF
HKD		USD 377.35
LTRA		YEN

Example

CAND		
DM	NT	
E.PD	200.00	PESO
FF		SF
HKD		USD 377.35
LTRA		YEN

In other words £200 English Pounds is worth \$377.35 U.S. Dollars. The correct amount will also appear next to other currencies you've entered an exchange rate for.

Example #2: You have \$50 U.S. Dollars and you want to find out what they are worth in English Pounds.

1. Press **CALCULATOR**

2. Press the letter "X".

3. Type in "50".

Display Reads

CAND	
DM	NT
E.PD	26.500 PESO
FF	SF
HKD	USD 50.000
LTRA	YEN

4. Press the letter "U" which stands for U.S. Dollars.

5. Then "26.500" will appear next to E. PD. showing that \$50 U.S. will only bring £26.5. All other currencies you've programmed will display how much \$50 U.S. are worth in their currencies also.

Display Reads

CAND	
DM	NT
E.PD	26.500 PESO
FF	SF
HKD	USD 50.000
LTRA	YEN

HOW TO UPDATE CURRENCY EXCHANGE RATES:

1. Press **CALCULATOR**

2. Press the letter "X".

3. Move the cursor to the desired currency.

Display Reads

CAND	
DM	NT
E.PD	26.500 PESO
FF	SF
HKD	USD 50.000
LTRA	YEN

Example

4. Simply press **ERASE** to erase the old rate and type in the new rate.

5. Press the letter "X" to confirm.

CAND	
DM	NT
E.PD	0.63 PESO
FF	SF
HKD	USD 1
LTRA	YEN

CURRENCY CONVERSION ABBREVIATIONS:

The currency converter lets you store up to 11 foreign exchange rates. The Country Currency abbreviations are:

CAND:	Canadian Dollar
DM:	Deutschemerk
E. PD:	English Pound
FF:	French Franc
HKD:	Hong Kong Dollar
LTRA:	Italian Lira
NT:	New Taiwan Yuan
PESO:	Mexican Peso
SF:	Swiss Franc
USD:	U.S. Dollar
YEN:	Japanese Yen

KEYTONE ON/OFF

HOW TO TURN THE KEYTONE ON OR OFF:



1 Press and HOLD DOWN **SPACE** then press the letter **K** while the space key is still down.

PERSONAL SECURITY CODE

HOW TO ENTER YOUR PERSONAL SECURITY CODE:



1 Press and HOLD DOWN

SPACE then press once, while the space key is still down.

Display Reads:

TYPE IN ANY 2 NUMBERS
FOR YOUR CODE

THEN PRESS ENTER

Example

TYPE IN ANY 2 NUMBERS
FOR YOUR CODE

65

THEN PRESS ENTER

 
Example

YOUR SECURITY CODE IS
NOW STORED IN THE
MEMORY.

3 Press **ENTER** to confirm. Your code will remain in memory until you choose to remove it.

HOW TO LOCK YOUR UNIT:

In order to lock your unit you must have already entered your 2-digit code.

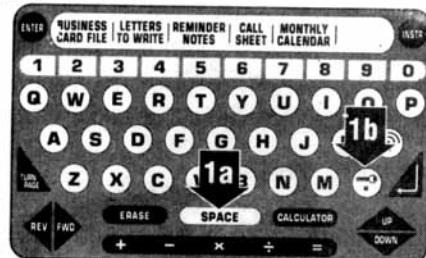

1 Press and HOLD DOWN

SPACE then press once, while the space key is still down. The unit is now locked.

Display Reads

THE SECURITY CODE IS NOW
ON

HOW TO THE UNLOCK YOUR UNIT AND GAIN ACCESS TO YOUR FILES:

1. Press the feature key you want to recall (i.e. Business Card File).
2. Type in your 2-digit code.
3. Recall your files.

Display Reads

TYPE IN YOUR SECURITY
CODE _ _

HOW TO REMOVE YOUR CODE FROM THE CODE MEMORY:

1. When the display reads "TYPE IN YOUR SECURITY CODE _ _", press and HOLD DOWN **ERASE** then type in your 2-digit code, while the **Erase key is still down**.
2. The removal of your code from memory will be confirmed on the display screen.

Display Reads

YOUR SECURITY CODE HAS
BEEN DELETED

INFRARED TRANSFER SYSTEM



The ElectrodeTM Plus & Pocket ElectrodeTM have a revolutionary Infrared (wireless) Transfer System which allows you to transfer Business Cards from either unit to the other.

There are 4 options available between The ElectrodeTM Plus and The Pocket ElectrodeTM to update and exchange files:



*Transfer from
one Pocket ElectrodeTM to another.*



*Transfer from an ElectrodeTM Plus
to another.*

*Transfer from a Pocket ElectrodeTM
to an ElectrodeTM Plus.*



*Transfer from an ElectrodeTM Plus
to a Pocket ElectrodeTM.*



NOTE: The receiving unit must be placed on the left and the sending unit must be placed on the right.

HOW TO TRANSFER "ALL" FILES

RECEIVING UNIT ON THE LEFT (INCOMING):



- 1 To make the receiving unit ready, turn on the receiving unit **first** by pressing **BUSINESS CARD FILE**

- 2 Press and HOLD DOWN **SPACE** and press **R** (for "receive") once, **while the space key is still down.**

3. Now prepare the sending unit. After your transfer, the receiving unit will take a few moments to sort the information transferred.

NOTE: Before doing an "ALL" file transfer, check the memory available status of the receiving unit. Compare the memory used status on the sending unit to calculate whether enough memory will be available to complete the transfer.

Display Reads

TYPE IN NAME OF PERSON
OR COMPANY NAME

BCF MEMORY USED:
BCF MEMORY LEFT:

Display Reads

INFORMATION IS BEING
RECEIVED

PLEASE WAIT A MOMENT

 
Display Reads

INFORMATION IS BEING
SORTED

PLEASE WAIT A MOMENT

OR ALL "NEW" FILES ONLY:

SENDING UNIT ON THE RIGHT (OUTGOING):

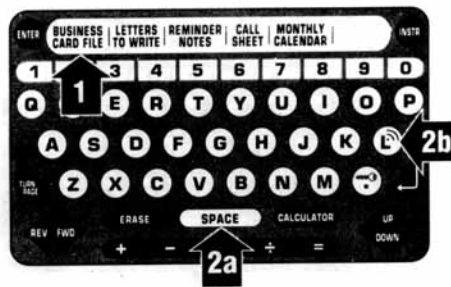

Display Reads

TYPE IN NAME OF PERSON
OR COMPANY NAME

BCF MEMORY USED:
BCF MEMORY LEFT:

Display Reads

TYPE IN A L L TO
TRANSMIT ALL THE FILES
OR
TYPE I N E W TO
TRANSMIT NEW FILES ONLY

3. Type in "ALL" to send all files, or type in "NEW" to send only the files entered since the last transfer.

NOTE: When the transfer is completed (several seconds) the most recent file that you entered into the sending unit will appear on both display screens. This confirms that the transfer has been successfully completed.

IMPORTANT: Avoid transferring ALL files to a unit which already contains those files. Those files will be duplicated in the receiving unit.

HOW TO TRANSFER ONLY

RECEIVING UNIT ON THE LEFT (INCOMING):



- 1 To make the receiving unit ready, turn on the receiving unit first by pressing **BUSINESS CARD FILE**

Display Reads

TYPE IN NAME OF PERSON
OR COMPANY NAME

BCF MEMORY USED:
BCF MEMORY LEFT:

- 2 Press and HOLD DOWN

SPACE

R

(for "receive") once, while the space key is still down.

3. Now prepare sending unit.

NOTE: After your transfer, the receiving unit will show the file that has just been transferred.

Display Reads

INFORMATION IS BEING
RECEIVED

PLEASE WAIT A MOMENT

Example

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5690 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

"ONE" BUSINESS CARD FILE:

SENDING UNIT ON THE RIGHT (OUTGOING):



Example

ALLEN MARKS-ACCOUNT EXEC
DUMONT CORPORATION
232-555-5690 FAX 555-5138
888 PARK AVENUE SUITE 7
NEW YORK NEW YORK 10023
1990 SALES VOLUME 745000

Display Reads

INFORMATION IS BEING
TRANSFERRED

PLEASE WAIT A MOMENT

- 1 Recall the individual Business Card File you want to transfer. When the file appears on the display screen place the unit to the right of the receiving unit, almost touching.

- 2 Press and HOLD DOWN

SPACE

L

(for "load") once, while the space key is still down.

NOTE: When the file reappears on the receiving unit's screen (almost instantly), the transfer has been successfully completed.

BATTERY REPLACEMENT

HOW TO REPLACE THE POCKET ELECTRODEX™ BATTERIES:

 
If your display screen starts to lose its contrast, it is time to replace the primary batteries. Your primary batteries should last approximately 2 years, based on an average use of 1 hour per day (20 times per day, 3 minutes each time). The battery life may vary according to your usage. The back-up battery saves your unit's memory while the primary batteries are being replaced. The back-up battery should be replaced every 3 years.

The Pocket ElectroDEX™ battery rating:

Primary Batteries™ (2): CR2430

Back-Up Battery (1): CR2016

NOTE: If all 3 batteries are removed at one time, the memory will be erased.

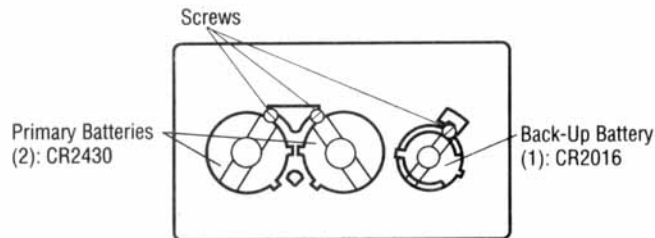

To replace the batteries remove the back cover of the unit. Use a screwdriver to remove the clip fastening screws. Locate the primary batteries as shown above.

Replace with new batteries from the specifications given above. If you can't find the correct batteries call our "HELP" number as listed on the warranty.

HOW TO REPLACE THE ELECTRODEX™ PLUS BATTERIES:

 
If your display screen starts to lose its contrast, it is time to replace the primary batteries. Your primary batteries should last approximately 2 years, based on an average use of 1 hour per day (20 times per day, 3 minutes each time). The ElectroDEX™ Plus contains a lithium no-loss memory back-up battery which holds the memory while the 4 primary batteries are being replaced. The back-up battery is concealed within the unit and should not require replacement.

The ElectroDEX™ Plus battery rating:

Primary Batteries (4): AA Alkaline Batteries

Back-Up Battery (1): CR2430 Lithium

To replace the batteries remove the battery plate on the bottom of the ElectroDEX™ Plus and replace the 4 AA batteries arranging them as shown:

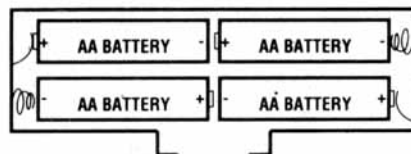

An AC/DC adaptor may also be used with The ElectroDEX™ Plus and can be purchased from an electronics store.

Reminder

When using AC Adapter, Model No. 273-1650 Archer, the voltage must be set to match unit specifications:

i.e.: 4.5 V or 6 V

The yellow tipped adapter plug is the only plug that will make the unit function. The word "TIP" on the yellow plug should always plug into the "—NEG" label on the cord connector.



MISCELLANEOUS

THE BUSINESS CARD FILE SORTING ORDER:

All Business Card Files are automatically sorted in alphabetical and then numerical order. This applies to both individual's names and company names that cross-reference each other.

NOTE: When recalling a name that exceeds 8 characters, if there is more than one file with the same name press **FWD** to bring the files

Example

CARRINGT
PLEASE TYPE NEXT LETTER

up on the display screen.

NOTE: The automatic sorting applies to the first 8 characters on line 1 and 2 of a Business Card File.

When there is more than one file with the same name and that name exceeds 8 characters, these files will be recalled in the same order that they were originally entered.

Example

CARRINGTON FRANK
CARRINGTON DIANE
CARRINGTON JOSEPH DUMONT CORPORATION 232-555-5609 FAX 555-5138 888 PARK AVENUE SUITE 7 NEW YORK NEW YORK 10002 1990 SALES VOLUME 745000

NOTE: As you press **TURN PAGE** to view additional pages of a

Business Card File, the file name (from Line 1 of the first page will remain on Line 1 as a reminder of which file you are viewing.

NOTE: The Business Card File display format suggests that you enter a person's last name and then first name. This is suggested since first names are more common and the duplication of many of the same first names will slow down the direct search procedure when recalling the file. Please note however that it is not mandatory to use last names first.

MEMORY SPACE AVAILABILITY:

There are 10 display pages of space available for each of the following:

LETTERS
TO WRITE

REMINDER
NOTES

CALL
SHEET

Display Reads

NOTE: The Business Card File occupies the majority of the 64K (64,000 character) memory. Every time you recall a Business Card File the display will show you how much memory you have used and how much you still have left. Individual Business Card Files can hold up to 10 display pages.

TYPE IN NAME OF PERSON OR
COMPANY NAME

BCF MEMORY USED: 22341
BCF MEMORY LEFT: 41569

INFRARED TRANSFER SYSTEM:

IMPORTANT: If you intend to transfer Business Card files **back and forth** between units you must note that the files most recently **transferred** into the receiving unit will continue to register as "new" files when transferred back to the original sending unit. In order to avoid unnecessary duplication of files between units we recommend the following procedure:



1. Transfer ALL or all NEW files from one unit to the other.



2. Transfer all NEW files from the receiving unit into the air so that these files will not be considered NEW in future transfers.





3. Now when you transfer files back to the original sending unit, you will not duplicate files from the previous transfer in.

NOTE: This example applies to all 4 transferring options.

MEMORY RESET:

To INTENTIONALLY delete ALL file information (clear the file memory entirely).

1. Press and HOLD DOWN  key.
2. Locate the RESET hole on the back of the unit and insert the tip of a paper clip, **while the Enter key is still down.**
3. Watch the display screen change to a full dot display.
4. Release the  key.
5. Insert the tip of the paper clip again, the display will return to normal and all files will have been deleted.

NOTE: If at any time information on the display screen should freeze and the keypad does not work properly, simply press in the RESET button. The display screen will unfreeze and your files will remain intact in the memory. **(Do not press Enter.)**

BACK-UP INFORMATION:

As with all computers, it is advisable to keep a written copy of all information stored in your ElectroDEX™ Plus or Pocket ElectroDEX™ in case it is lost, stolen, or physically damaged.

WARNING:

It is advisable to avoid X-Ray and magnetic fields, such as airport security systems. This can cause scrambling or loss of unit's memory.

AUTOMATIC SHUT-OFF:

Your unit will shut off automatically after 3 minutes of non-use.

LIMITED WARRANTY

Tele-Art, Ltd. warrants to the original purchaser of this product, that if this product proves to be defective in material or workmanship, we will repair or replace it without charge for a period of 1 year from the date of original purchase.

This limited warranty covers repair or replacement without charge, only when defective product is submitted to Tele-Art, Ltd. with proof of original purchase.

This limited warranty covers all defects incurred in normal use. It does not apply to any unit that has been subject to alteration, modification, abuse, negligence, accident or use in any manner contrary to instructions herein by Tele-Art, Ltd.

Tele-Art, Ltd.'s liability is limited solely to the repair of this product. We disclaim liability for consequential damages, for breach of any express or implied warranties including merchantability or fitness for purpose. This warranty gives you specific legal rights and you may have other rights that may vary from state to state.

To receive service or a replacement product under this warranty, contact the ROLODEX Electronics Service Center directly. Send (postage insured for your own protection) the defective product along with proof of purchase and \$10.00 to cover return handling, packing, insurance & postage to:

ROLODEX ELECTRONICS SERVICE CENTER
245 Secaucus Road • Secaucus, NJ 07094-2196

If you have any questions about this product call the HELP LINE
1-800-727-ROLO (7656)

© TM TELE-ART 1990
Rolodex ® is a registered trademark of
Rolodex Corporation

Lic. U.S. Pat. 4,117,542
PRINTED IN HONG KONG